

UNIVERSAL CLOSURES RECCOMENDED ON
ROOF SLOPES LESS THAN 4:12

2-1/2" #10 WOODGRIP SCREW
(ATTACH EVERY OTHER HIGH SIDE ROLL)

-NOTE: CUT PANELS TO LEAVE APPROX.
2" GAP FROM SPLASH STOP FOR RAIN
WATER TRAVEL.

PERMATILE 26g METAL PANEL


1" #10 WOODGRIP SCREW
(ATTACH EVERY 2' TO 3' O.C.)

UNDERLAYMENT MINIMUM 30#

PLYWOOD(TYP.)

VALLEY PAN

THIS PAGE CONTAINS GENERAL APPLICATION DETAILS -
ACTUAL INSTALLATION MAY REQUIRE ADDITIONAL ITEMS
BASED ON GOOD ROOFING PRACTICES.

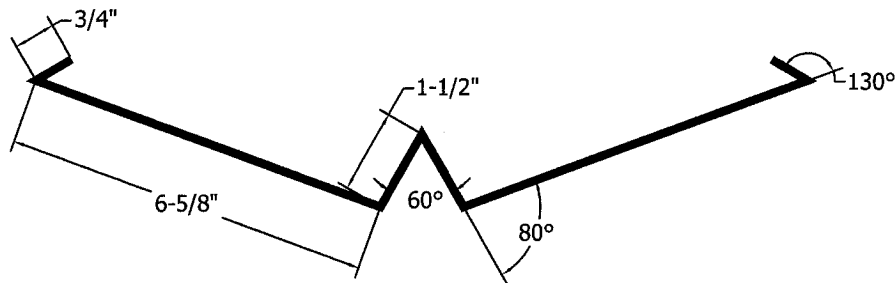

PERMATILE ROOFING
A Division of Advanced Aluminum

DESCRIPTION: W-VALLEY DETAIL

STYLE: FOR USE ON PLYWOOD DECKING

FILE: PTVALLEY-01